

INSTRUCTIONS FOR USING KIRBY POWER POLISHER

Take the motor-driven cleaning brush and belt out of the Kirby floor cleaning nozzle and leave the rug guard (on the nozzle) unlatched.

**IMPORTANT! IT IS NOT NECESSARY TO REMOVE THE BRUSH ADJUSTMENT SCREWS TO GET THE BRUSH OUT OF THE NOZZLE. RAISE THE RUG GUARD AND THEN PULL BRUSH OUT WITH THE FINGERS. DO NOT REMOVE THE BRUSH ADJUSTMENT SCREWS.**

Pull power polisher belt (on polisher brush) up through the center slot in the metal frame of the polisher. Now snap the polisher on the Kirby floor nozzle with the projecting L-shaped arm on the polisher frame in back of the nozzle. This arm keeps the rug guard lifted off the floor and away from the polisher brush while the polisher is in use.

Pull polisher belt up into the nozzle and attach it to the motor shaft in the same manner used for attaching the regular vacuum cleaner brush belt. Replace nozzle cap on the nozzle. The Kirby Power Polisher is now ready for use.

Apply wax to the floor in accordance with the directions given by the manufacturer of the wax used. Generally the wax is applied with a soft cloth or a special applicator supplied by the wax manufacturer.

Now, to polish the surface of the floor to a high gloss, turn on the Kirby control switch and run the machine (with the polisher attached) back and forth over the floor in slow, even strokes. You will find that the Kirby polisher produces a glossy surface equal or superior to the results which can be achieved by any other method.

THE SCOTT & FETZER COMPANY

December 15, 1940