 


# HERITAGE™ HOME TURBO GROUP.

Use & Care  
Booklet.

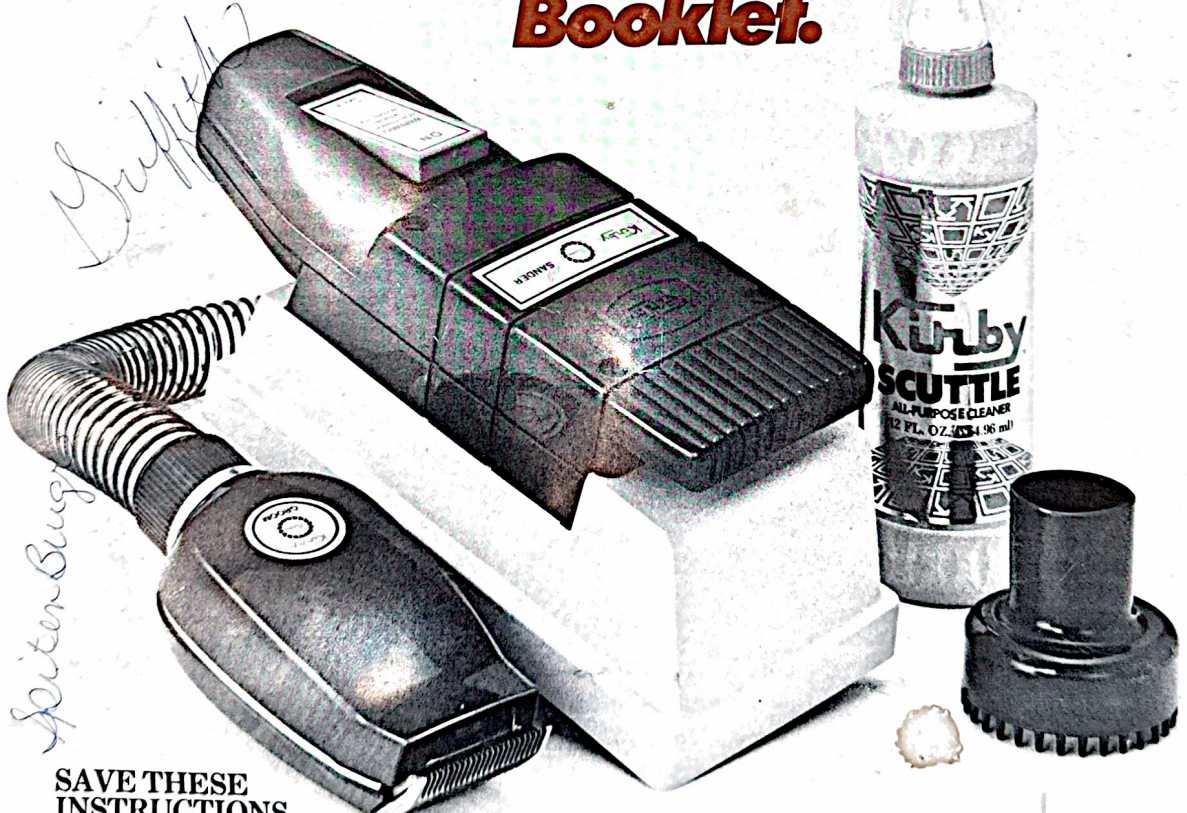

**SAVE THESE  
INSTRUCTIONS.**

Important: Read all instructions,  
warnings and safeguards before  
using.

**Kirby®**



# YOUR HERITAGE HOME TURBO GROUP CONSISTS OF THE FOLLOWING:

## The Turbo Sander.

A lightweight, turbine-driven orbital sander that sands, scrubs and polishes surfaces and also can be used as a massager. The Turbo Sander comes with the following:



- Three sheets of sandpaper (one coarse, one medium, one fine).
- One scrubbing pad.
- One polishing pad.
- One massage pad.
- One 12-oz. bottle of Scuttle all-purpose cleaner.

## The Turbo Groom.

An air-powered clipper that cuts hair and removes clippings at the same time. The Turbo Groom comes with the following:

- One comb.
- One tube of lubricating oil.
- Three clipper guides (Trim, Medium and Long).
- One hose.
- One massage cup.



air current strikes the turbine's blades, causing the turbine to rotate rapidly. The rotary motion of the turbine powers the Turbo Sander and Turbo Groom.

**NOTE:** Since the Turbo Sander and the Turbo Groom both rely on the suction provided by your Kirby, it's important to empty or change the vacuum cleaner bag as often as necessary to ensure peak performance.

collectingdust.com

 
# THE TURBO SANDER.

The Kirby Turbo Sander is a rugged, yet extremely lightweight orbital sander — a high-quality power tool built of the very finest materials available. Designed to operate at 8,000 to 12,000 RPM, the air-powered Turbo Sander is ideal for a wide variety of sanding, scrubbing and polishing duties. Attach the special massage pad, and it even brings relief to tired, aching muscles.

On top of all that, the Turbo Sander's dust shroud enables it to pick up a high percentage of the dust created by sanding, making it the cleanest orbital sander on the market.

It also may be the simplest and most convenient to use. The vacuum hose from your Kirby plugs directly into the sander — no special adaptor is needed. No special sandpaper is needed, either. The Turbo Sander will accept any standard one-third sheet size sandpaper.


## Using the Turbo Sander.

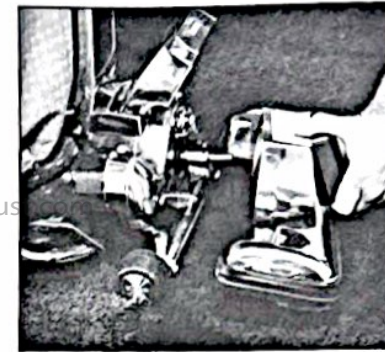

**1** Move the Toe-Touch control to the number 8 position and raise the headlight hood.

**2** Turn the Belt Lifter counter-clockwise until it stops. Follow the instructions on the nozzle.

 **3** Unlock the accessory lock and remove the rug nozzle (or other attachment) from the front of your Kirby.

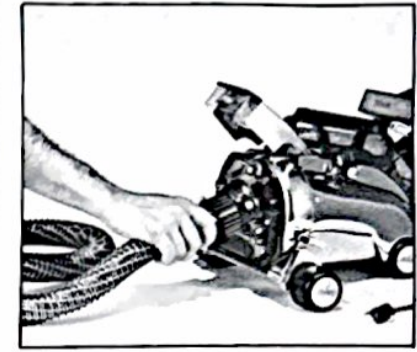

**4** Hook the attaching lugs of the flexible hose coupling over the ends of the attaching bar on the power plant and then swing the hose coupling end up against the power plant.

**5** Rotate the accessory locking lever until the hose connection is tightly closed and sealed against the power plant. Lower the headlight hood.



**6** Attach the sander to the hose.



**7** Turn your Kirby on and then move the sander handle switch to the ON position.

**WARNING:**  
Before changing units or attachments, unplug power cord from wall outlet, and be sure motor and fan have stopped.



# THE TURBO SANDER.

collectingdust.com

collectingdust.com

## Using the Turbo Sander.



When sanding wood surfaces, be sure to choose the right grade of paper for the job at hand. Coarse paper will remove material faster; fine paper will result in a smoother surface. (Note the position of the hands: This is the correct grip. Also, take care not to force the tool—let it do the work. The Turbo Sander will do a better and safer job when it is allowed to operate at the rate for which it was designed.)



The scrubbing pad works well for the scratch free cleaning of hard surfaces such as porcelain and ceramic tile. To remove stubborn stains, apply a little Scuttle all-purpose cleaner directly to the stain before scrubbing. Use light pressure. Do not use dust shroud with this pad. Use only as directed on hard surfaces. Do not use on porous materials such as linoleum or coated surfaces such as enameled stoves, refrigerators, etc.

**WARNING**  
DO NOT USE THE TURBO SANDER FOR REMOVING SOLVENT BASED MATERIALS. BEFORE USING THE SANDER, MAKE SURE THAT ALL METAL PROTRUSIONS (NAILS, TACKS, ETC.) ARE BELOW OR REMOVED FROM THE SURFACE TO BE SANDED. CONTACT WITH METAL OBJECTS COULD RESULT IN DANGEROUS SPARKS, AND COULD DAMAGE THE SANDER PAD.  
EMPTY OR REPLACE THE KIRBY FILTER BAG AFTER EACH USE OF THE TURBO SANDER. DO NOT STORE THE KIRBY WITH SANDED DUST IN THE BAG, AS IT MAY CONTAIN COMBUSTIBLE MATERIALS. DO NOT SMOKE WHILE EMPTYING THE BAG.  
SECURE YOUR WORK WITH CLAMPS OR A VISE. THIS IS NOT ONLY SAFER, BUT ALSO FREES BOTH OF YOUR HANDS TO OPERATE THE SANDER.  
BECAUSE THE SCRUBBING PAD OFTEN IS USED IN CONJUNCTION WITH WATER AND/OR SCUTTLE, DO NOT USE IT WITH THE DUST SHROUD IN PLACE, AND DO NOT BLOCK THE FRONT AIR-INTAKE PORTS. FLUIDS COULD BE VACUUMED UP INTO YOUR KIRBY, CREATING A DANGEROUS SHOCK HAZARD.



The polishing pad is ideal for buffing furniture wax to a lustrous sheen, or for polishing shoes. Do not use the dust shroud with this pad.



 
Relieve tired, aching muscles with the Turbo Sander's exclusive massage pad. Do not use the dust shroud with this pad.

**WARNING:**  
THE TURBO SANDER'S MASSAGE PAD IS INTENDED FOR USE WHERE MASSAGE IS DESIRABLE OR MEDICALLY RECOMMENDED. DO NOT USE IT ON THE ABDOMEN WHEN PAIN IS PRESENT. DO NOT USE IT ON SWOLLEN OR INFLAMED AREAS, SKIN ERUPTIONS, LEGS WITH VARICOSE VEINS, UNEXPLAINED CALF PAINS OR ANESTHETIC SKIN AREAS UNLESS APPROVED BY YOUR PHYSICIAN. USE BY CHILDREN OR DEBILITATED PEOPLE SHOULD BE SUPERVISED BY ADULTS.

## Loading the sandpaper.



- 1 Unsnap the dust shroud and remove it from the sander.
- 2 Snap both sandpaper clamps up.

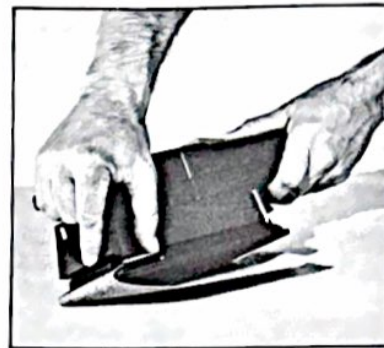

- 3 Load paper in the front end of the sander. Then snap down the front clamp.



- 4 Load paper in the rear end of the sander and snap down the rear clamp.

- 5 Place the dust shroud in position and snap it in place. The paper should be tight.

**NOTE:** Follow the first four steps when installing the scrubbing, polishing or massage pad. Do not use the dust shroud with these pads.



## Attaching the dust shroud.

The Turbo Sander will operate well with or without the dust pick-up shroud. However, most people prefer to use it with the shroud in place, because the sander will then remove almost all of its own dust. To attach the shroud:

- 1 Wrap it around the sander, keeping the open end of the shroud to the rear of the sander.
- 2 Snap it closed. Make sure the shroud sides are properly engaged.

collectingdust.com

collectingdust.com



# THE TURBO GROOM.

The Kirby Turbo Groom is the cleanest and most convenient home barbering system available. It's perfect for the kids' hair, or for touch-ups between trips to the barber. As it cuts hair, the Turbo Groom automatically vacuums up the clippings, removing them before they can fall to the floor—or down the back.

It's made of lightweight material that makes it easy to handle. And you won't be bothered by the fatiguing vibration or excessive heat often generated by conventional electric clippers. The smooth, powerful turbine motor and the air-removing jet stream both operate on the air power provided by your Kirby.

The Turbo Groom's simple, sturdy construction enables it to give years of reliable service with very little care: a) Before each use, and before starting, apply one drop of oil to both sides of clipper blades; b) To obtain full turbo power, change or empty Kirby filter bag as required and c) Periodically, snap off the top cover and brush out any hair in the mechanism.

 
## Using the Turbo Groom.




**1** Move the Toe-Touch control to the number 8 position and raise the headlight hood.

**2** Turn the Belt Lifter counter-clockwise until it stops. Follow the label on top of nozzle.

**3** Unlock the accessory lock and remove the rug nozzle (or other accessory) from the front of your Kirby.

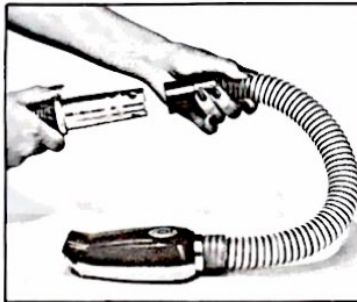

 **6** Attach the hose from the Turbo Groom to the flexible hose from your Kirby.

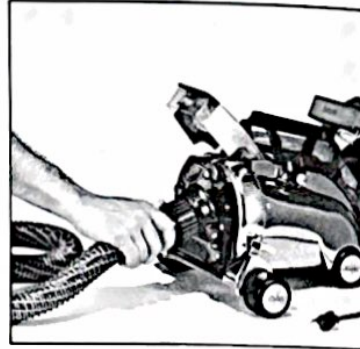


**4** Hook the attaching lugs of the flexible hose coupling over the ends of the attaching bar on the power plant and then swing the hose coupling up against the power plant.

**5** Rotate the accessory locking lever until the hose connection is tightly closed and sealed against the power plant. Lower the headlight hood.



**7** Turn your Kirby on.

 
**WARNING:**  
Before changing units or attachments, unplug power cord from wall outlet, and be sure motor and fan have stopped.

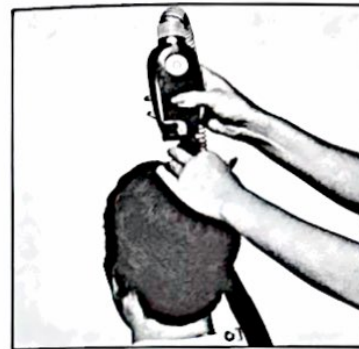

The simplest way to trim hair is to hold strands in such a way that the amount you wish to cut off extends beyond your first and second fingers. Then shear it off with the clippers.




 For tapering the back of a head with very short hair, use the "Trim" guide.

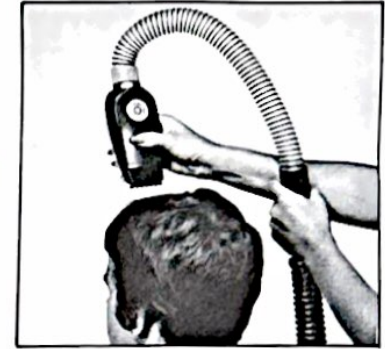

For tapering very short hair on the sides, use the "Medium" guide.

 For very short (1/2 inch) hair on top, use the "Long" guide.

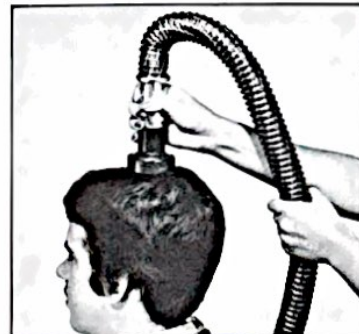

Connect the massage cup to the accessory hose and move it through the hair for an invigorating scalp massage.



### Attaching the trimming guides.

Simply slide the front edge of the cutting blades into the guide.



# THE TURBO GROOM.

collectingdust.com

 
collectingdust.com

## Blade care.


collectingdust.com

collectingdust.com


collectingdust.com

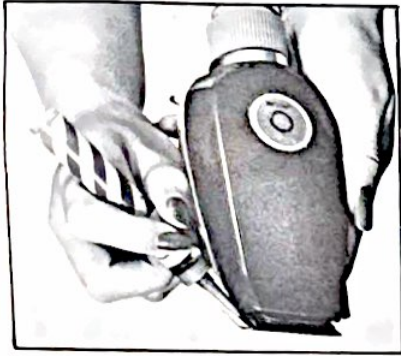

 **1** Before using the Turbo Groom, apply one drop of oil to each side of the clipper blades.

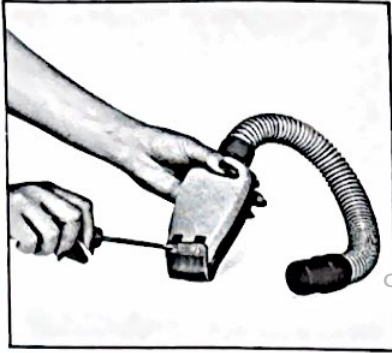

 **2** From time to time, the blades will need to be cleaned. To do so, simply remove them from the Turbo Groom (they are held in place by two screws) and wash them in a water/detergent solution.

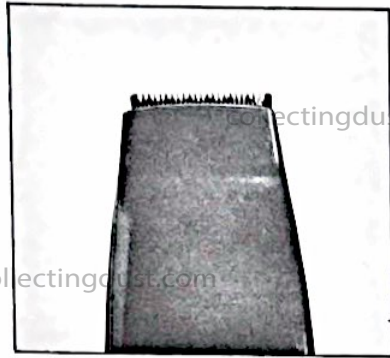


**NOTE:** When replacing the blades, allow the cutting edge of the lower blade to protrude 1/32" beyond the upper one. Before using the Turbo Groom again, apply a drop of oil to each side of the blades.

collectingdust.com

## Cleaning the clipper and hose.

 collectingdust.com

collectingdust.com

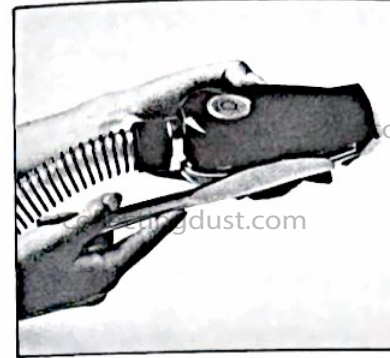

**1** To clean the Turbo Groom's internal passage, snap off the top cover with a dinner knife, remove any hair with a brush, and snap the cover back on.



**2** To clean the hose, simply flush it with a water/detergent solution.

**NOTE:** Do not clean the Turbo Groom while it is attached to the flexible hose.

collectingdust.com

collectingdust.com

collectingdust.com

collectingdust.com

collectingdust.com

collectingdust.com

collectingdust.com

collectingdust.com

collectingdust.com

collectingdust.com

collectingdust.com

**LIMITED WARRANTY.**

Subject to the conditions and exceptions stated below, The Kirby Company ("Company") warrants to the original purchaser (OTHER THAN FOR PURPOSES OF RESALE) that each Kirby Turbo Group product shall be free from defects in material and workmanship under normal use and service when used for personal, family, or household purposes ("consumer purposes") for two (2) years from the date of purchase by the original purchaser or for one (1) year from the date of any factory repair or rebuild provided to the original purchaser under the terms and conditions of the KIRBY REBUILDING AGREEMENT. During the applicable warranty period, the Company will furnish for the Kirby product a replacement part for any part found to be defective, through an authorized Kirby Distributor. All transportation expenses must be borne by the purchaser. This Limited Warranty does not apply to expendables, such as scrubbing pads, sandpaper, etc., charges for labor or service calls, damage caused by accident, misuse, negligence, abuse, or to any Kirby product which has been repaired so as in the judgment of the Company to affect its stability or reliability, or in which parts not approved by the Company shall have been used.

The foregoing provisions state the exclusive remedy for any breach of warranty or any other claim in respect of the described Kirby product. THERE IS NO OTHER EXPRESS WARRANTY.

 
IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO TWO (2) YEARS FROM THE DATE OF PURCHASE BY THE ORIGINAL PURCHASER, AND TO ONE (1) YEAR FROM THE DATE OF ANY FACTORY REBUILD PROVIDED TO THE ORIGINAL PURCHASER UNDER THE TERMS AND CONDITIONS OF THE KIRBY REBUILD AGREEMENT. ANY IMPLIED WARRANTY OF FITNESS FOR COMMERCIAL USE IS HEREBY DISCLAIMED. THIS IS THE EXCLUSIVE REMEDY, AND ANY LIABILITY FOR INDIRECT OR CONSEQUENTIAL DAMAGES OR FOR ANY INCIDENTAL EXPENSES, IS EXCLUDED. Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

The Company neither assumes nor authorizes any other person to assume for it, any additional liability in connection with the sale of its products.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Service calls and labor costs, including those during the warranty period, will be at the expense of the owner.

**Kirby®**

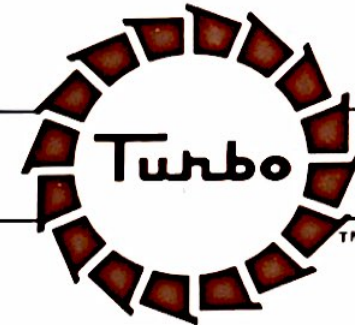

# The Kirby Company

A SCOTT & FETZER GROUP  
CLEVELAND, OHIO 44102  
U.S.A.

Form #260381 Rev. A (U.S.A.)  
Printed in U.S.A.