### HOW TO SET UP THE

## Handi-Butler

Place your KIRBY on a table with the nozzle toward you. Raise the floodlight cover, swing the belt-lifter lever to "OFF" and turn the nozzle lock to the left as far as it will go against the stop pin. (See Figure No. 1).

Remove the Handi-Butler from the box and check the belt. It must be stretched over the pulley and the belt lifter hook, when the belt-lifter handle is in the "ON" position. Then rotate the handle to the "OFF" position, stretching the belt. Now hook the supports over the horizontal bar on the fan case, roll the top lug under the nozzle lock and make it secure by rotating the lock to the right . . . as shown in Figure No. 2. Next, rotate the belt-lifter handle to the "ON" position, lower the floodlight cover, and place the two wheel cups under the front wheels to steady the cleaner. Turn the cleaner so that the Start-Stop switch is toward you for easy access.

To change the Handi-Butler's wheels, remove the wheel cover by turning the cover lock screw about one turn. Unscrew the wheel nut by rotating it clockwise.

To prepare the Lambswool cover, stretch it over the rubber disc, making sure that it is centered, pull the drawstring tight, and fasten securely with a bow knot, carefully tucking the ends under the edge binding of the pad. The assembly is then screwed on the end of the shaft. Of course, the cover and the wheel previously in use will have been removed.



# CAUTION !

For Safety's sake do not use a cracked or badly worn wheel. Wear glasses or goggles to protect your eyes from flying particles. Hold the "work" firmly with both hands. Always use the cover with the sheeting buff, the flannel buff, the grinding and the wire brush wheel.

When polishing or buffing do not put sufficient pressure on wheel to cause belt slippage.

#### HANDI-BUTLER GUARANTEE

Within one year from date of purchase, the manufacturer, after due examination, will replace or repair any Handi-Butler part that the Company judges defective in material or workmanship . . . provided that only genuine Handi-Butler accessories (polishing, grinding wheels, etc.) are used.

Oil bearings sparingly . . about one drop of oil in each bearing oil hole about every three months should ordinarily be satisfactory.

#### SPARE PARTS:

· · · · · · · · · · · · · · · · · · ·	
SHEETING BUFFING WHEEL	\$ 1.20
COMPOUND No. 1 FOR THE ABOVE	60
FLANNEL BUFFING WHEEL	.60
COMPOUND No. 2 FOR THE ABOVE	.60
GRINDING WHEEL	.60
WIDE BOLICH WHITE	1.50
WIRE BRUSH WHEEL.	2.20
LAMBSWOOL PAD	2.15
RUBBER BELT	.16

PRICES SUBJECT TO CHANGE WITHOUT NOTICE



PLEASE ORDER FROM
THE LOCAL DISTRIBUTOR

#### SANITATION SYSTEM

Manufactured by

## THE SCOTT & FETZER COMPANY

West 114th Street and Locust Ave. Cleveland 2, Ohio, U. S. A.


SANITATION FOR THE NATION Since 1919



Handi-Butler

AN ENTIRE KIT OF POWER OPERATED HOUSEHOLD TOOLS!



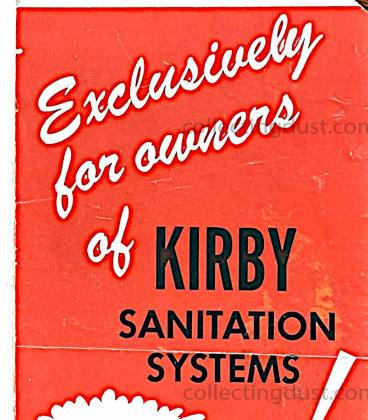

\$**24**95

MADE IN U. S. A.

and the

A Matched Set of Tools

for a great variety of

household maintenance uses!





SHEETING BUFFING WHEEL

For use with Polishing Stick No. 1. Household metals and brightwork, such as door knobs, fireplace equipment and switch plates, Sporting equipment, such as fishing lures and golf clubs, can be brought to life with a smooth and highly polished surface.



For use with Polishing Stick No. 2. Precious metal jewelry, silver and chromium table and hollow-ware, and plastics can be given "bright as a mirror" finishing touches.



GRINDING

Sharpens knives, plane blades, chisels, scissors and garden tools. Do not use on soft metals such as aluminum, which might stick to the wheel.




WIRE BRUSH WHEEL

Cleans dirt, rust and scale from pans, stove parts, fools and sporting equipment. Also varnish, paint or enamel may be removed from metal parts.



course, this is a "finishing" Operation.

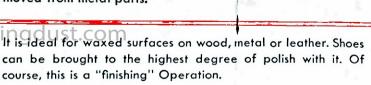









BUILT-IN DUST AND PARTICLE REMOVER . . . A shielded and directed air-suction stream to carry small waste particles away and into the filter-bag is CO a feature not usually found in a portable tool.

LIFTER-GRIP . . . When using the Handi-Butler, portability is gained by removing the long handle (used when cleaning rugs) and replacing with the Lifter-Grip. See the instruction booklet supplied with the Kirby Sanitation System for the best way to do this operation.

RUBBER HOLDING CUPS . . . They are held to the top of the table or other surface by suction power. The Kirby wheels are placed in them to steady the entire unit.

